


CAUTION

- 1. The unit includes electronic devices and solenoid valve, please do not knock. 2. Caution for connecting line when disassembling the unit.
- 3. Please wipe it using soft cloth with neutral detergent when cleaning the product. Next wipe detergent and dirt by the wrung-out soft cloth, then using dried soft cloth to dry.
- 4. Please do not washing with watering or using some detergent with particle such as scouring powder and laundry detergent, also do not using diluent, ... detergent with high acid or Nylon brush to clean this product, lest to damage surface or erode internal electronic components, especially be careful not to damage transparent cover which placed induction window to avoid decrease the effectiveness of reaction. Tips: Ensure the distance between sensing window and counter top is above 35cm When installing on stainless steel counter top. Installation

How To Use

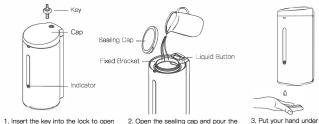

- the top cover after install the battery Long press the setting button for about flowing, and recover it. 3 seconds, then the LED light on with flashing 3 times
- liquid soap, remove the extra over

Children should be used under adult supervision to prevent accidentally eating!

3. Put your hand under the sensor until the liquid sprayed out



Please don't throw away discarded batteries, recycling used batteries by correct way! The unit has been designed with microcomputers & electronic circuit etc. Do not splash water.



- . After installing the batteries, long press the setting button for about 3 seconds, then the LED light on with a flashing, after 3 times flashing will the unit stay in standby, long press the setting button to switch between turning the machine standby status and dormant status.
- 2. The unit is suggested to install batteries even if you don't use it, so that the unit will run automatically every 72 hours to avoid the catheter pressure adhesion.
- 3. Some of unit had installed batteries and in dormant status before delivery. Keep press setting buttons for more than 3 seconds, the indicator will flash 3 times turning into standby status. Whereas if the unit turn to dormant status after keeping press the setting button.

Liquid Adjustment

At the standby status, you can adjust liquid by pressing the liquid adjustment button The default liquid volume output is around 1.0ml before delivery, it will increase around 0.5ml output for per press. Totally 5 levels adjustment with the range of liquid soap supply 0.5-2.5ml. Different liquid may have a slight deviation.



Troubleshooting

ontrol system trouble ower supply problem stiteries poor contact or out of power rouits problem or poor contact ook sight of indicator ot enough power	Replace the controller Check the Circuits and batteries Re-install or replace the batteries Check the Circuits Clean the indicator window Replace the batteries	
atteries poor contact or out of power rcuits problem or poor contact ock sight of indicator ot enough power	Re-install or replace the batteries Check the Circuits Clean the indicator window Replace the batteries	
rcuits problem or poor contact ock sight of indicator of enough power	Check the Circuits Clean the indicator window Replace the batteries	
ock sight of indicator ot enough power	Clean the indicator window Replace the batteries	
ot enough power	Replace the batteries	
ensor continue working	Remove the sensing object	
ut of sensing distance	Contact the the dealer	
nit fault	Contact the the dealer	
nort liquid supply time	Adjust the liquid output	
oo viscous liquid	Reduce liquid viscosity	
quid coagulation or obstruction	Try some times or contact the dealer	
nit no qu	t fault ort liquid supply time o viscous liquid	

Specification


Material	304 stainless steel	Power	DC9V(6 AA Batteries)		
Volume	700ml	Sensing Distance	5-9cm		
Dimension	100 x 110 x 220mm	Liquid Supply	0.5ml ~2.5ml (5 step adjustment)		
Net Weight	1.1kg	Ambient temperature	0–45℃		
Note: The liquid output was measured with water as liquid under day battery. 5V condition					

For reference only.




SP1205SD2 Automatic Soap Dispenser

 
USER MANUAL



Introduction

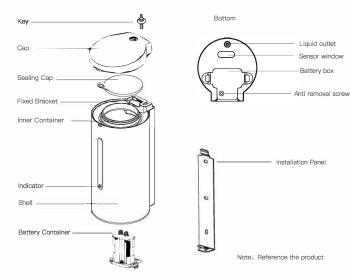

Dimension

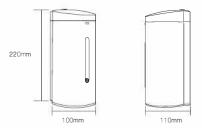

Important Safety Instruction


- To make sure the unit dose work and extend its lifespan under the good condition, please notice that:
- 1.Please read user manual and instructions very carefully before installing the unit.
- 2.Please using the same AA battery (6 pcs) of well known brand. Old and new batteries can not be mixed. If counterfeit or low-grade batteries are used, it may do harm to the unit lifetime.
- 3. Please check the wall is flat or not and clean the surface of wall before installing the unit.
- 4.Distance (more than 25cm) will be needed from the bottom of unit to tables or other
- 5. The instructions of installing will be given to the user or manager by qualified person.
- 6.Reflective objects must not be put in the sensing distance under the unit.
- 7.Please do not cover with reflective objects (such as mirror or stainless steel) on the table against the bottom of the unit, to avoid wrongly placed.
- 8.Indoor use only, to avoid wrongly placed.

Packing list

UnitX1	Installation	Panel X1	ST4X25 Screw X3	Installation Manual X1
Expansion Screw	X3 (Certification X1	Key X1	

- 1.Please make sure if any items are missing or problems before installing, contact your dealer or
- 2. Specification of part items changed might be not informed in time, please contact your dealer or manufacturer when problems can not be solved during installing.
- 3. Main objects are sealed by special bag. Do not hit or drag too heavy when you move or open the bags.

Installation

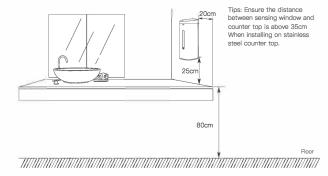




Installation




1.refer to step5, remove mounting plate from the machine. Attach the mounting plate to the wall and draw the positions of three mounting holes with pencil.



 
2.Use a drill to bore three holes expansion screw head into the corresponding holes.



 3.Screws will be matched with (φ6) according to the marks, put plastic nail - heads in the wall, fix them together with mounting




 4.Align the upper slot of the machine with the mounting plate clip, then make the machine fit with the mounting plate, and then slide the machine downward to make the upper and lower clips all snap in.



5.Screw in the anti theft screw, then install the battery box and screw in the anti removal screw.

 Battery Installing and Replacement



- 1. Keep the body straight up when the LED light is flashing
 - 2. Unscrew the screw and remove the battery box
- 3. Put in or replace all standard batteries (DC 9V/AA batteries (6 Pcs)). Put it back and tighten the screws.