


Thermostatic Shower Set with Shelf Installation Instructions


- Step 1**
1) Install water supply pipe, thread dimension G1/2.
2) Be sure pipe work centers should measure $150\text{mm} \pm 15\text{mm}$ in distance.
3) Flush out the impurities.

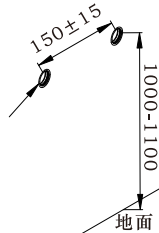


- Step 2**
Wrap the thread of Eccentric with PTFE tape.




- Step 3**
Install the wrapped eccentric into the wall.

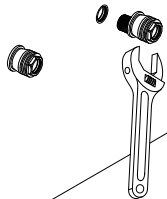


- Step 4**
Put the gradienter on the eccentric, when the bubble is in the middle of gradienter, it is ok.

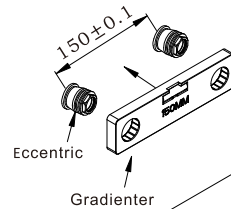


- Step 5**
1) Install the body, connect to the eccentric.
2) Holding when the body near the wall, prepare for install the screws.

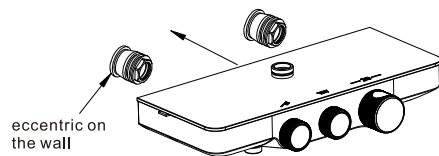


- Step 6**
1) Lock the screws at the bottom of the body with allen key.
2) Testing under 0.5Mpa water pressure, if no leakage, follow the next step.

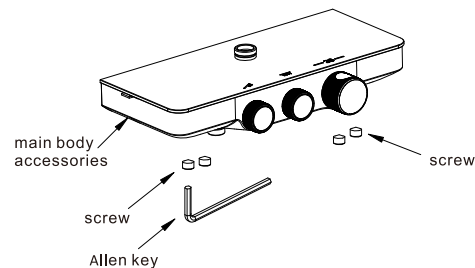


- Step 7**
1) Install the riser rail on the body.
2) Mark the bracket's position with a pencil.

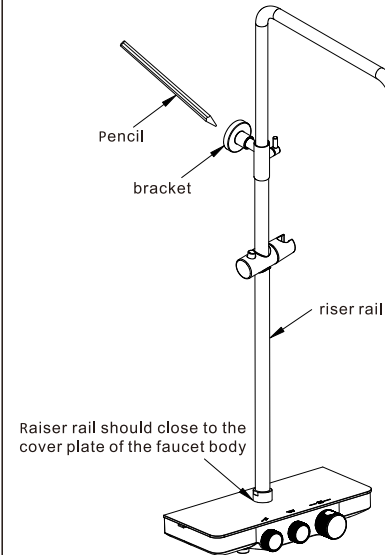

- Step 8**
1) Remove the riser rail.
2) Install the plastic holder in the marking position.
3) Install the bracket.

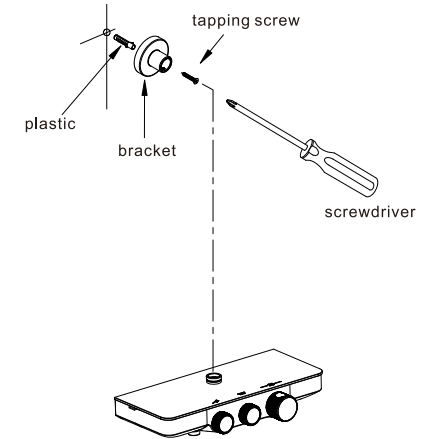

- Step 9**
1) Install the decorative cup to the bracket.
2) Install the riser rail, connect to the body and the bracket.
3) Fix the screw with allen key.

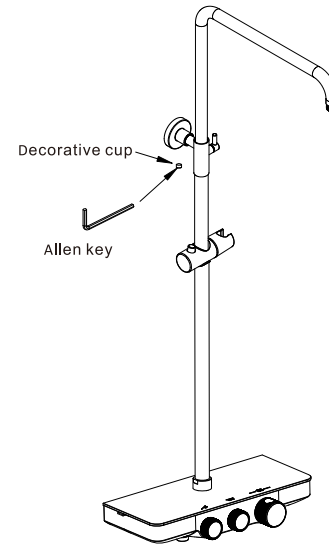

- Step 10**
1) Install the shower hose
2) Install the hand shower
3) Install the shower head
4) Water supply and test
5) Finish.

