
## The Picture of Instrallation Size

## Steps of Instrallation

mixer with self-tapping screws.

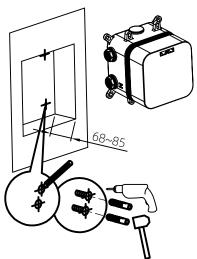

1. According to the picture of mixer instrallation size,dig a suitable hole in the wall (the depth of the wall is 73-86 after decoration). Put the mixer in the

suitable location and mark the two fixing holes. Use an electric drill to drill  $\sqrt{7}$  holes at the mark and insert the expansion rubber particles, and then fix the


2.Use your own water pipes connections, connect the mixer to the hot and cold water sources by the left hot (red) right cold (blue)(hot and cold water must be connect correctly, otherwise the temperature cannot be adjusted). The water outlet is connected to the required water outlet port respectively(shower head, hand shower, etc) and check any leaks at each connection.

2

Cold Water Pipe


 $\Rightarrow$ 


Hot Water Pipe

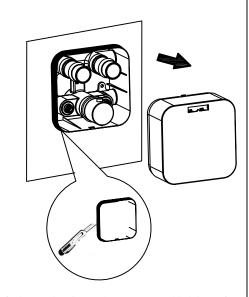


 $3. \\ After decorating the wall, remove the protective cover and divide the part of the concealed box above the wall.$ 



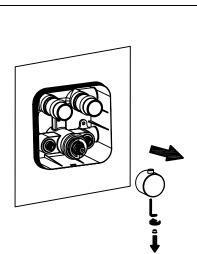

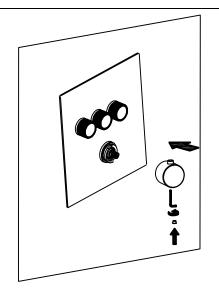

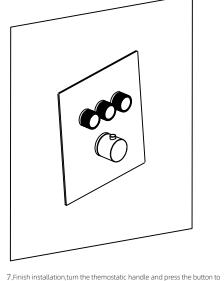

turn on the mixer.Check the mixer that working properly.

7



5.install the cover panel.

6

6.Reinstall the themostatic handle.

4

4.Remove the themostatic handle.